DNx-VR-608

8-Channel Variable Reluctance and Counter Interface



- and Counter Interface
 DNA-/DNR-/DNF-VR-608 for use with Cube/RACKtangle™/ FLATRACK™ I/O chassis
- Wide input ranges (50 mV to 250 V p-p)
- Conditioned inputs directly drive digital outputs
- Bipolar (VR) inputs up to 300 kHz
- Unipolar (Hall / TTL) inputs up to 300 kHz
- Inter-tooth timing allows acceleration tracking
- High/Low tooth index detection
- Open sensor, stalled rotation and overspeed detection



DNR-VR-608 for use in RACKtangle™/FLATRACK™ chassis. DNA-VR-608 boards are for use in Cube chassis.

General Description:

The DNA/DNR/DNF-VR-608 are 8-channel, variable reluctance sensor interface boards designed for use in UEI's Cube, RACKtangle and FlatRACK chassis respectively. Electronically, they are identical. The boards are designed for use in a wide variety of motion and rotation monitoring applications. Each channel provides a fully differential input and is capable of monitoring VR output levels as high as 250 V peak-to-peak. The board is also an ideal choice as a general counter unrelated to variable reluctance sensors, including hall effect sensors, as it can be used to measure an extremely wide variety of AC signals.

The DNx-VR-608 offers a maximum input pulse rate of 300 kHz. The maximum input pulse rate is somewhat dependent on the signal level. The detailed specs to the right show pulse rates obtainable at different input signal levels. The minimum detectable input signal may be fixed at 50 mVp-p or may be set to "Adaptive Peak Threshold" mode where the threshold is set at approximately 30% of a time averaged input. A watchdog circuit resets the input to minimum threshold level if the input "drops out" for 85 mS. Open sensor/disconnected cable detection is also provided on the VR-608 board.

The board can detect and differentiate between open sensors and stalled rotation. Douts can be set to change if an open sensor is detected and/or rotation has stopped. The Douts can also be used as an overspeed alarm. The board is also can be used in torque measurement systems that utilize two VR sensors and determine torque by comparing the timing of the pulses from each sensor.

The VR-608 provides a unique and powerful signal conditioner mode where the VR/Hall inputs are conditioned and made available as a TTL compatible digital outputs. The board supports a matrix configuration where any input can be directed to any or all of the digital outputs. For applications where the VR-608 is primarily used as a signal conditioner, the input to Dout mapping can be set to start running at power up, even if the host Cube or RACK is not running any applications software.

The DNx-VR-608 supports the following operating modes:

- Timed Count/Frequency: Counts the number of teeth detected during a specified time interval and returns the velocity in RPM.
- \bullet N pulses: Measure the time taken to detect N teeth and returns velocity in RPM
- Z/Index pulse: Measures the number of teeth and the time elapsed between two Z/Index pulses. The Z/Index tooth is usually a gap or a double tooth on the encoder wheel. The max input frequency is approximately 50 kHz in the double tooth mode.
- Inter-tooth time: For those looking to measure at very low rates and/ or to track acceleration between teeth, a powerful inter-tooth timing function is available. This function measures the time differential between teeth with a resolution of 15.2 nS at a counter depth of 32 bits. Each measurement is stored in a FIFO, so acceleration profiles over the entire input operating range can be acquired for indefinite periods.

The input impedance of each channel is greater than 40 k Ω with less than 250 pF of capacitance. This high impedance ensures the board is compatible with an extremely wide range of variable reluctance sensors.

Technical Specifications:


recinical specifications:				
Number of channels	8			
Channel configuration	Differential			
Channel isolation	4 isolated banks of two channels			
Input Impedance	> 40 kΩ,			
input impedance	< 250 pF			
Input voltage range	Up to 250 Vp-p			
Maximum pulse rate (bipolar,	300 kHz at ≥ 3.2 Vp-p			
VR input mode)	200 kHz at ≥ 2.1 Vp-p			
	100 kHz at ≥ 1.1 Vp-p			
	50 kHz at ≥ 0.5 Vp-p			
	25 kHz at ≥ 0.25 Vp-p			
	10 kHz at ≥ 0.125 Vp-p			
	≤ 5 kHz at ≥ 0.08 Vp-p			
Minimum detectable input	50 mVp-p, fixed input mode			
(VR input mode)				
Maximum pulse rate,	500 kHz (Vlow < 1.2 V and Vhigh > 2.2 V)			
unipolar/TTL mode	· · · · · · · · · · · · · · · · · · ·			
Measurement accuracy	Please see the following page			
Inter-tooth timing				
Time base resolution	15.15 nS			
Counter depth	32-bits			
Timing measurement range	20 μS to 65 seconds			
Overvoltage protection	300 Vp-p			
Input FIFO size	Rev. 1: 512 x 32			
	Rev. 2: 2 k x 32			
DOut Simulation accuracy (continuous mode)	0.5% of expected frequency			
GENERAL SPECIFICATIONS				
Power dissipation	< 3W			
Isolation	350 Vrms			
Operating Temperature Range	Tested -40 to +85 °C			
Operating Humidity	95%, non-condensing			
Vibration IEC 60068-2-6	5 g, 10–500 Hz, sinusoidal			
IEC 60068-2-64	5 g (rms), 10–500 Hz, broad-band random			
Shock <i>IEC 60068-2-27</i>	100 g, 3 ms half sine, 18 shocks @ 6 orientations			
IEC 60068-2-64	30 g, 11 ms half sine, 18 shocks @ 6 orientations			
Altitude	120,000 FT			
MTBF	180,000 hours			

The DNx-VR-608 is fully isolated from the UEI chassis as well as other I/O boards installed in the chassis. The inputs are divided into four channel pairs, and each two-channel pair is isolated from the others. Each isolated channel pair is also supported with a logic level digital output.

All connections are made through 37-pin D connectors that ensure that mating cables or connectors are readily available. Users may also use the DNA-STP-37 screw terminal panel via DNA-CBL-37 series cables.

Software is included, providing a comprehensive, yet easy-to-use API that supports all popular operating systems, including Windows, Linux, and most real-time operating systems—such as QNX, Intime, VXworks, and more. Additionally, the UEIDAQ Framework—an even higher level Windows driver—supplies complete support for those creating applications in all popular Windows programming languages, as well as data acquisition software packages such as LabVIEW and MATLAB/Simulink.

Block Diagram:

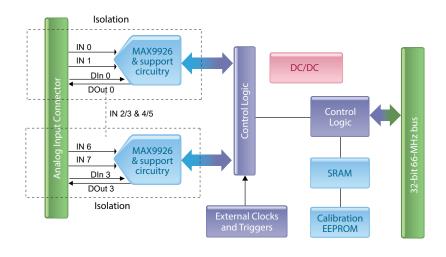

Pinout Diagram: (37-pin female dSub)

D/TTL In 0	1				
IN 7+ 18 35 IN 7-	IN 0+	2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18	21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36	IN 0- nc IN 1- DOGnd 1 DIGnd IN 2- nc IN 3- DIGnd IN 4- nc IN 5- DOGnd 3 DIGnd IN 6- nc	Barrier Isolation Barrier

Measurement Resolution and Accuracy:

The DNA/DNR/DNF-VR-608 accuracy is largely based on the chassis master clock. The 66 MHz master clock offers the following accuracy:

10 ppm Initial Accuracy

15 ppm Temp drift over -40 to +85°C operating range 5 ppm Drift over time (first year, less per year thereafter)

For the calculations here, we will assume a flat 30 ppm accuracy of the 66 MHz clock, or a period of 15.15 nS.

Unlike most analog measurements, the operating mode of the VR-608 board, along with the input frequency, have a great impact on overall measurement accuracy and resolution.

Timed Count/Frequency: Counts the number of teeth detected during a specified time interval and returns the velocity in RPM.

In this mode, the accuracy is determined by the input frequency and the duration over which you count. The rough equation to determine resolution is simply:

resolution = 100/ ((input frequency) x (sample duration))

For example, if the input frequency is 10 kHz sampled for 1 second, the resolution is one part in 10,000 or 0.01%. If the input frequency is 1 kHz and the sample duration is 0.1 Hz, the resolution is one part in 100, or 1%. To compensate for crystal error you need only add a flat 0.003% (for the 30 ppm master clock error).

Accuracy = $1/((input frequency) \times (sample duration)) + 0.003\%$

Note that if you "play" with these numbers, you will see that this measurement mode is well suited for applications with high input frequencies that do not have to be updated quickly. For lower frequency inputs and/or for systems requiring quicker data updates, consider using the N-pulses (a.k.a. N-teeth) mode.

N pulses: Measure the time taken to detect N teeth and returns velocity in RPM

Unlike the timed count mode, this mode determines RPM by measuring the time delay between teeth. This mode simply counts the number of 66 MHz master clock pulses that occur between teeth. (To return RPM you do need to enter the number of teeth on the sensor gear into the software.) The resolution of this mode is:

Resolution =
$$\frac{100 \text{ x (Input Frequency)}}{\text{N x } 66,000,000}$$

where N is the number of teeth you wish to include after the first tooth. For example, if you want to measure the time between adjacent teeth, N=1. If you wish to measure the time between the first tooth and the fourth, N=3.

This mode is subject to the same 0.003% accuracy of the 66 MHz master clock, so:

For example, if your input frequency is 20 kHz, and you select N=1, your system accuracy would be 0.0333%. If the input frequency remains 20 kHz, but you sample the time between the first tooth and the third (N=2), the accuracy becomes 0.0182%.

Selecting a larger "N" increases the resolution of the measurement, but also decreases the frequency at which you can update measurements. This is a trade-off that must be made based on your applications' accuracy requirement, the input frequency and how quickly you need to sample the data. If your frequency is high and/or your need to acquire the data is not fast, you may wish to consider the Timed Count/ Frequency mode mentioned in the section to the left.

Connection Options:

Part #	Matching Cable	Description
DNA-STP-37	DNA-CBL-37S	Connects all I/O signals to easy to use screw terminals

Ordering Guide:

Part #	Description	
DNx-VR-608	8-Channel Variable Reluctance and Counter Interface	
DNA-STP-37	37-channel screw terminal panel	
DNA-CBL-37	3ft, 37-way flat ribbon cable	
DNA-STP-3762	Universal Screw Terminal Panel for DNx-Series I/O	
DNA-CBL-37S	3ft, 37-way flat ribbon cable	
DNA-CBL-62	2.5ft, 62-way round shielded cable	
DNA-STP-62-DR	Universal Screw Terminal Panel for DNx-Series I/O	
Extended Warranty	Option to purchase UEI's extended warranty (up to 10 years) is available	

3